



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DSC-W630. You'll find the answers to all your questions on the SONY DSC-W630 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY DSC-W630**  
**User guide SONY DSC-W630**  
**Operating instructions SONY DSC-W630**  
**Instructions for use SONY DSC-W630**  
**Instruction manual SONY DSC-W630**

**SONY**

4-410-736-43(1)

Digital Still Camera / Instruction Manual	GB
Цифровой фотоаппарат / Инструкция по эксплуатации	RU
Цифровий фотоапарат / Посібник з експлуатації	UA

**Cyber-shot**



DSC-W630/W650



[Your user manual](#)  
[SONY DSC-W630](#)

**Manual abstract:**

*The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents. This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9. The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [ Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. the recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. [ Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.*

*On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. the recycling of the GB materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.*

*to ensure that the battery will be treated properly , hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.*

*Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i. e. , marked with an or mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station. Use a tripod with a screw less than 5.5 mm (7/32 inches) long. Otherwise, you cannot firmly secure the camera, and damage to the camera may occur. Speaker Battery/memory card cover USB / A/V OUT jack Memory card slot The battery pack into the 1 Insertcan charge the battery even when itbattery charger.*

*If you continue charging the battery pack for about one more hour after the CHARGE lamp turns off, the charge will last slightly longer (Full charge). â· When the CHARGE lamp flashes and charging is not finished, remove and re-insert the battery pack. The above charging times apply when charging a fully depleted battery pack at a temperature of 25Â°C (77Â°F). Charging may take longer depending on conditions of use and circumstances..*



[Your user manual](#)  
[SONY DSC-W630](#)